

How to back up recordings of multiple channels of Capture Advance NVR/DVR on a USB Flash Drive

Follow the steps below outlining how to back up recordings of multiple channels of a Capture Advance NVR/DVR on a USB flash drive.

Important Notes:

- Ensure that the USB flash drive is formatted properly to **FAT32**.
- For the DVR, make sure that the USB flash drive and the mouse are both connected on the USB ports at the back of the device.
- To play the downloaded videos on a PC, you may use the following media players:
 - [VLC Media Player](#)
 - [Mini Media Player](#)

Procedures:


1. On the main screen, move/hover the mouse to the bottom part to show the task bar icons. Select **Playback**.



2. The **Time Search** page will open up. Select **Batch Backup**.



3. There will be a pop-up window as shown below. Please input the needed details.

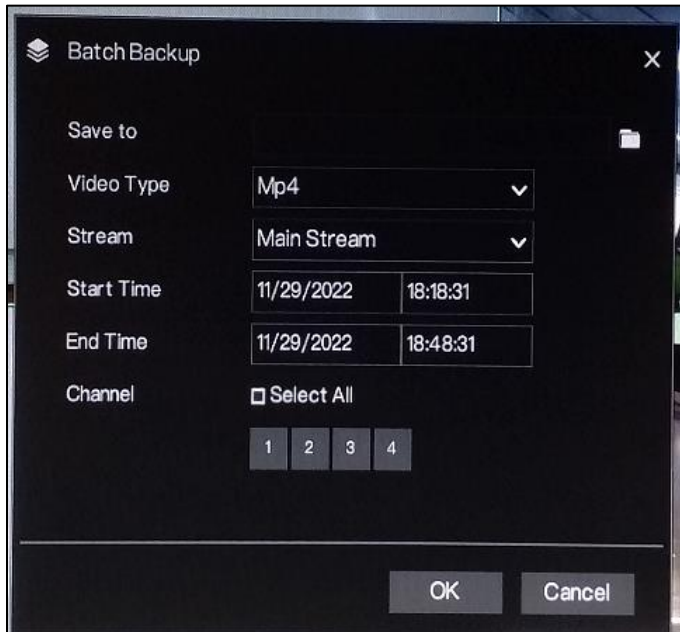

[1] Click the Folder icon (under **Save to**) to select the USB flash drive.


[2] On the **Video Type**, you can select between *Mp4*, *AVI* and *Private*.





[3] On the **Stream**, you can select between *Main Stream* and *Sub Stream*.

[4] On the **Channel**, select the channels that you would like to back up. You may also tick **Select All** to select all channels.

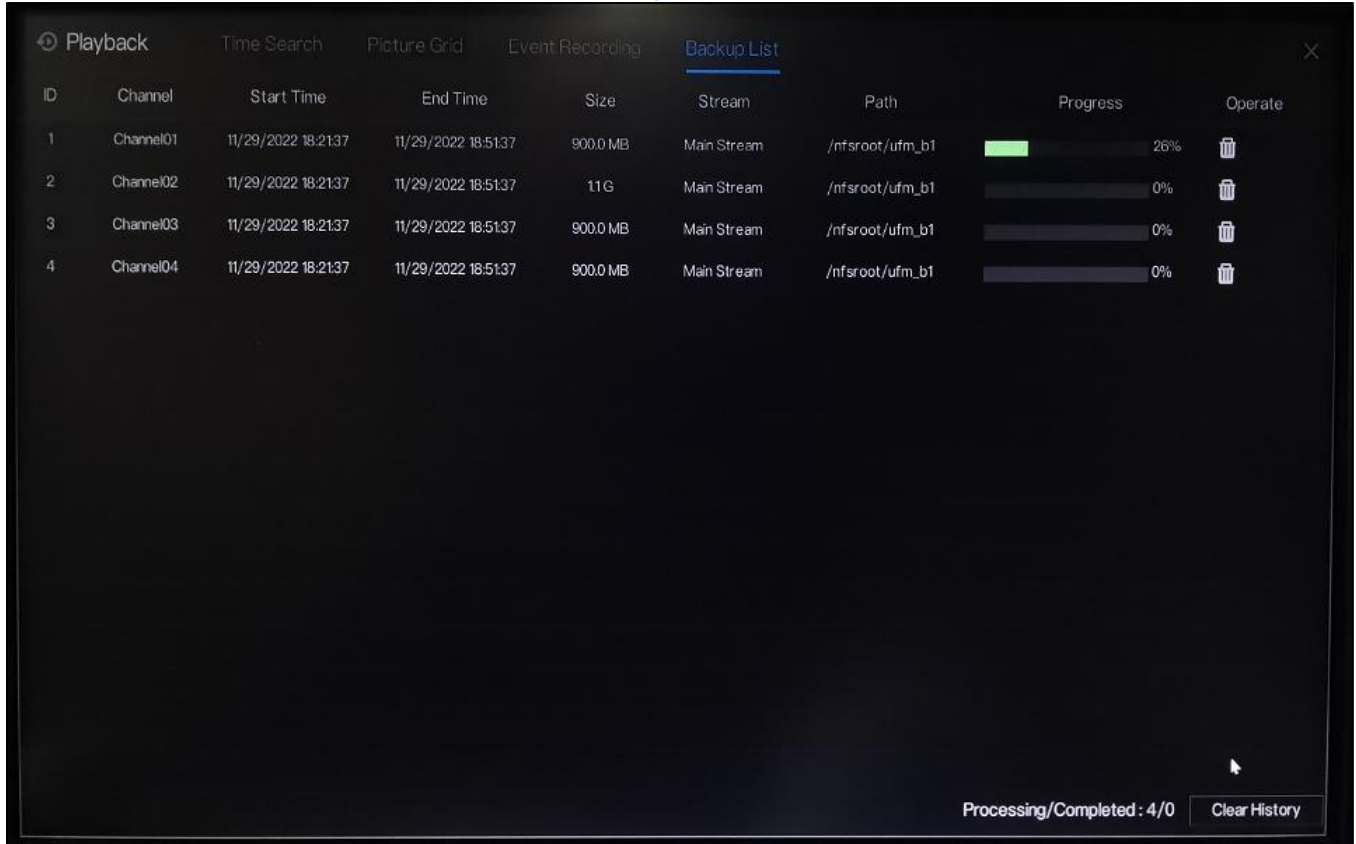[5] Click on **OK** to proceed.

- You can view the backup status in the **Backup List** menu.



ID	Channel	Start Time	End Time	Size	Stream	Path	Progress	Operate
1	Channel01	11/29/2022 18:21:37	11/29/2022 18:51:37	900.0 MB	Main Stream	/nfsroot/ufm_b1	26%	
2	Channel02	11/29/2022 18:21:37	11/29/2022 18:51:37	11 G	Main Stream	/nfsroot/ufm_b1	0%	
3	Channel03	11/29/2022 18:21:37	11/29/2022 18:51:37	900.0 MB	Main Stream	/nfsroot/ufm_b1	0%	
4	Channel04	11/29/2022 18:21:37	11/29/2022 18:51:37	900.0 MB	Main Stream	/nfsroot/ufm_b1	0%	

Processing/Completed : 4/0 [Clear History](#)

- You may disconnect the USB flash drive from the NVR/DVR once the backup is complete.