




How set up a Capture Advance NVR/DVR to record on motion detection only

Follow the steps below outlining how to set a Capture Advance NVR or DVR to record on motion only.


- 1. Log in to the Capture Advance NVR/DVR.
- 2. Go to Settings > Record > Record Schedule. Select the channel and make sure that Enable Record is turned on.
- 3. On the right-side of the screen click the green box for Motion.
- 4. Set your preferred schedule in the schedule block. Then, click Apply.
- 5. You can also copy the setting to other channels by clicking Copy > select the channels > OK. Click Apply to complete the process.

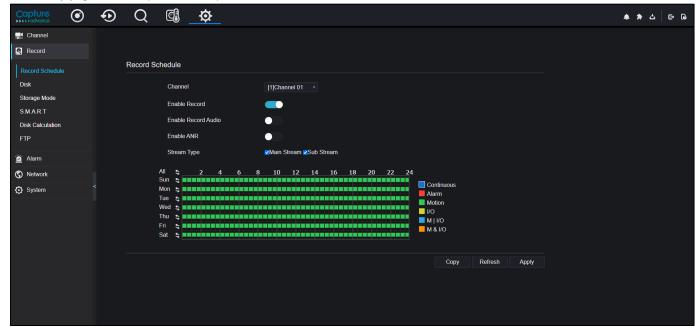






6. Go to Alarm > General. Make sure that Enable Alarm is on.

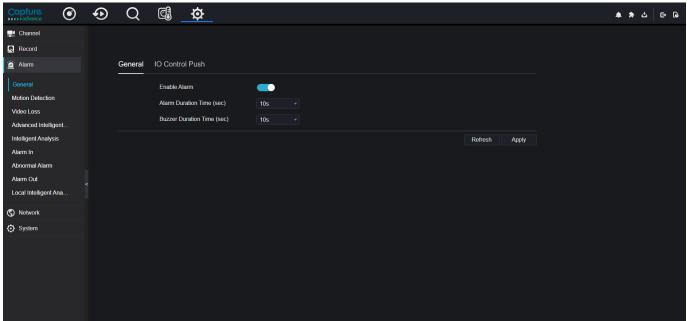

- 7. Go to Motion Detection > select the channel and turn on Enable Motion Detection.
- 8. Under Event Actions, make sure to turn on Enable Event Recording and select the corresponding channel under Recording Channel. Click Apply to save the setting.

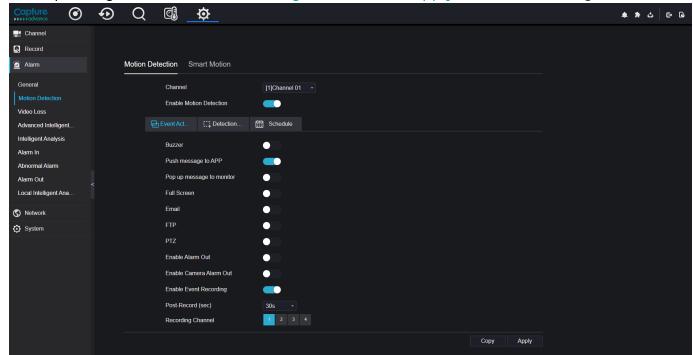


9. You can also copy the setting to other channels by clicking Copy > select the channels > OK. Click Apply to complete the process.






10. Go to the **Detection Area** tab. **Draw the detection area** and set the **Sensitivity**. Area with red grid means selected. Click **Apply** to save the setting.

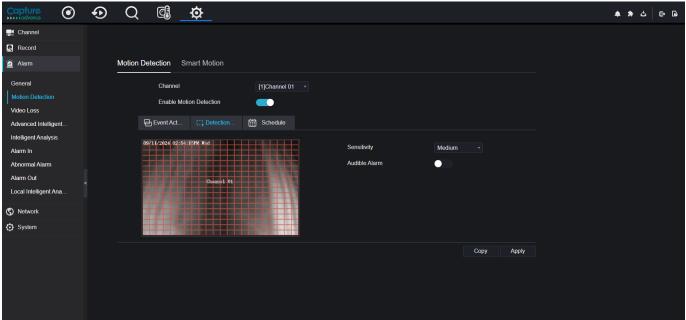

- 11. You can also **copy the setting to other channels** by clicking **Copy** > **select the channels** > **OK**. Click **Apply** to complete the process.
- 12. Go to the Schedule tab. Set your preferred schedule in the schedule block. Then, click Apply.

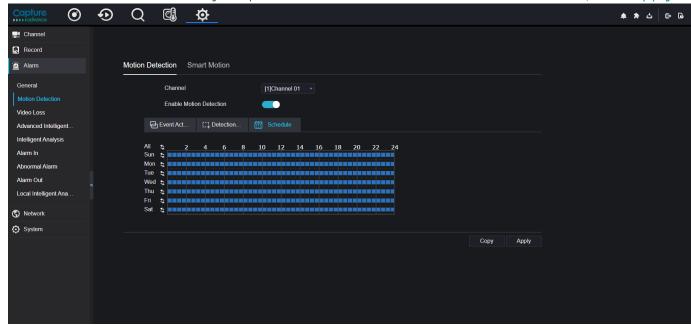

13. You can also **copy the setting to other channels** by clicking **Copy** > select the channels > **OK**. Click **Apply** to complete the process.